


LS-20 Laser Shutter Socket Pin Allocations

Refer to the Lasernet LS-20 Instruction Manual for details on how to connect the LS-20 Shutter.

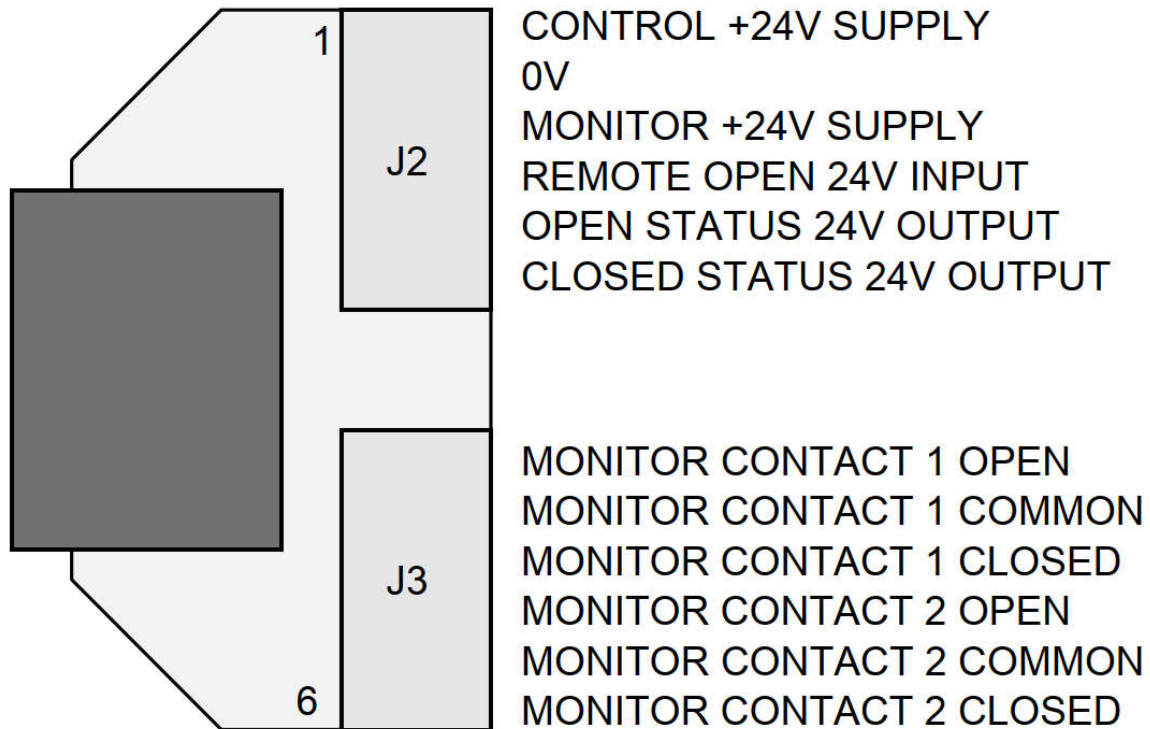

For sales and technical support:

Lasernet Ltd.

Lasernet House,
137 Hankinson Road,
Bournemouth
BH9 1HR
United Kingdom.

Tel: +44 (0) 1202 770740

Fax: +44 (0) 1202 770730

Email: sales@lasermet.com

Website: www.lasermet.com