

Remote Switching Station for LS-20 Shutter

Part no. LS-RS-20



LS-RS-20 Remote Switching Station



LS-RS-20-FL Remote Switching Station with flying lead


The Remote Switching Station is used to remotely operate the LS-20 Laser Shutter.

It is used by simply connecting the shutter cable to the LS-RS-20.



LS-20 Shutter

Connection schematic

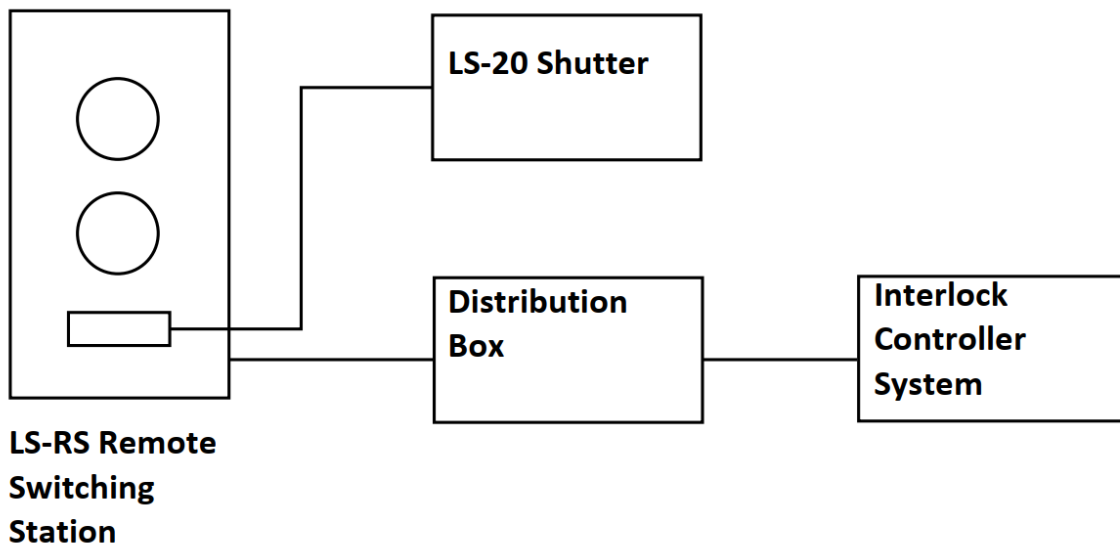

Refer to the Lasermet LS-20 Instruction Manual for details on how to connect the LS-20 Shutter.

