

Maglock - Mortice version

Part no. MAGLOCK


Mortice-mounted single direct-pull magnet, 12 or 24VDC, monitored, complete with armature fixings for timber and metal doors.

- For use on aluminium, timber and steel doors
- Maintains magnetic holding force of at least 250kg (550lbs)
- CE marked
- Has a security pin feature to help prevent unauthorised brackets removal of the magnet from the door frame fixing plate
- For outward and inward opening doors
- User selectable dual voltage - 12 or 24VDC
- Monitoring available (Hall Effect)
- Built in voltage spike suppressor



Specifications

Single Magnet	28mm x 230mm x 38mm
Armature	11.3mm x 160mm x 36mm
Nominal Holding Force	250Kg (550lbs)
Supply Voltage	12 or 24VDC (± 15%) Dual coil
Nominal Current	480mA @ 12VDC 240mA @ 24VDC
Monitoring	Built-in voltage spike suppressor Compact isolated relay dry contact with LED
Door Gap Positioning	3mm (1/8") max. Mortice-mounted for single action swinging or sliding door applications
Magnet Housing	Brushed satin aluminium
Note	To achieve immediate release, it is important that the release switch breaks the circuit on the positive supply to the magnet

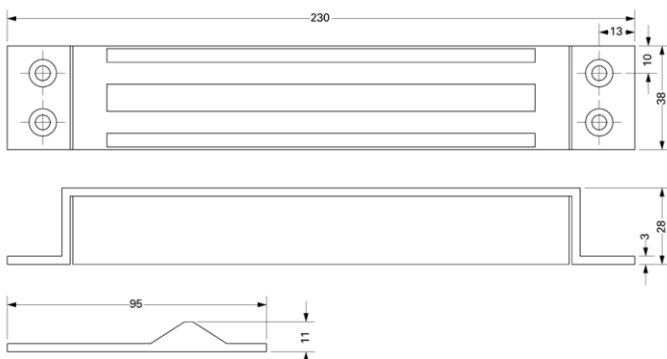

Armature Unit

