

Emergency Stop Break Glass Door Release

Part no. ESTOP-BG-2CO

The ESTOP-BG is a safety device that enables the door to be opened. Pushing the clear plastic front of this unit releases the door maglocks. Contrary to the title there is no glass in the unit.

The front of the unit is plastic and the button can be reset, once triggered, by inserting and rotating the plastic key underneath the unit.

The key is a separate item and

must be kept available in order to reset the unit.

The ESTOP-BG mimics breaking glass whilst offering the user the benefits and environmental advantages of a resettable operating element.

An indicator drops into view at the top of the window on activation. The unit is then simply reset with a key and is ready for re-use straight away.




Operation and Resetting



Step 1

Press the central button in case of emergency to release the door maglocks

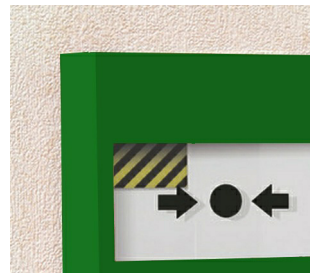


Step 2

A warning indicator drops into view when the button is pressed



Step 3

To reset the unit, a simple plastic key is inserted into the bottom

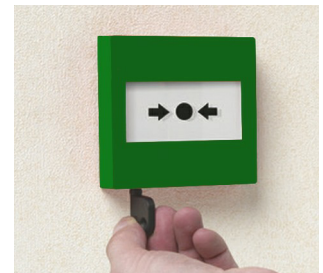

Step 4


A quick turn of the key and the unit is reset and ready for use again immediately

Specifications

Part no.	ESTOP-BG-2CO
Mounting	Surface mounted, 20mm conduit entry points are provided for ease of installation
Dimensions	85w x 85h x 58d mm (3.34w x 3.34h x 2.28d in)
Operating Temp	-20°C to +65°C
Accessories	ESTOP-BG Reset Key

Electrical Arrangement

The unit incorporates two independent single pole changeover switches providing double pole changeover contacts.

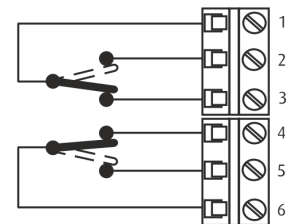

Conformance to Directives

2014/35/EU Low Voltage Directive
2015/863 RoHS Directive

